

## Cummins PCC 1302 Modbus Enable

1. Place the generator into the stop mode.
2. Push the up and down arrow simultaneously on the controller for 2 seconds to access the service menu.
3. Select "Setup Menus."
4. A password must be entered in order to gain access to the submenus to make adjustments.
5. Use the + and - symbols to navigate through the numbers, and then use the right arrow selection symbol to make a selection.
6. Enter the password 574, then press the right arrow selection key to gain access to the submenus. Note: If password is entered correctly, there will be no need to re-enter password unless there is 5 minutes or more of inactivity. At that time you will have to re-enter the password.
7. Once the password is entered correctly select "Genset Service" then select "More Options".
8. Next, select "Modbus" then select "Adjust" to change "Modbus Enable" to "Yes".
9. Once modbus selection has been changed to "Yes" save this change.
10. Press the down arrow on the "Modbus Enable" submenu to gain access to the "Modbus Setup".
11. Press the right arrow selection symbol to select the "Parity"
12. Change the "Parity" to "None" then save changes.
13. Press the back button until you exit the setup menu section.
14. Changes are now complete.

