

## Installation Instructions:

1. Put the generator in stop mode.
2. Disconnect the positive battery terminal. (Do not reconnect the positive battery terminal until step 14.)
3. Using the magnetic mounts, mount the One Link inside of the generator enclosure close to the controller. (Be sure the mounting location is away from weather exposure.)
4. Connect the ring connector on the **red** wire of the battery wiring harness to the positive (+) battery terminal.
5. Connect the ring connector on the **black** wire of the battery wiring harness to the negative (-) battery terminal.
6. Route the **red** wire and **black** wire from the One Link I/O cable to the battery wiring harness installed in steps 4 and 5.
7. Using one of the included lever wire connectors, connect the bare **black** wire from the battery wiring harness to the bare **black** wire from the One Link I/O cable.
8. Using one of the included lever wire connectors, connect the bare **red** wire from the battery wiring harness to the bare **red** wire from the One Link I/O cable.

## Panel:



## Parts List:



OLM002



Lever Connectors(2)

### Installation Instructions(cont.)

- 9.** Route the **red** wire with **white** stripe from the One Link I/O cable to Wire 219. (Wire 219 could be on J14-2 or B13-4.)
- 10.** Route the **red** wire with **black** stripe from the One Link I/O cable to Wire 218. (Wire 218 could be on J14-3 or B13-3.)
- 11.** Route the **black** with **white** stripe wire from the One Link I/O cable to K1 axon (-).
- 12.** Route the **blue** wire with **white** stripe from the One Link I/O cable to K1 axon (+).
- 13.** Route the **green** wire from the One Link I/O cable to J3M-3.
- 14.** Route the **white** wire from the One Link I/O cable to wire 2 on J1-2.
- 15.** Route the **white** wire with **black** stripe from the One Link I/O cable to wire 1 on J1-3.
- 16.** Mount the LTE/GPS antenna on top of the generator enclosure.
- 17.** Connect the LTE antenna cable to the top connector on the right side of the One Link.
- 18.** Connect the GPS antenna cable to the bottom connector on the right side of the One Link.

### **Installation Instructions(cont.)**

**19.** Plug the 15 pin connector into the bottom of the One Link, and tighten both screws using a flathead screwdriver.

**20.** Reconnect the positive battery terminal to the battery.

At this time the One Link will power up and begin communicating with the generator. Please allow 5-10 minutes for the One Link to establish a connection to the internet, and then check the activation screen or your One Link account to ensure the generator's vitals update and the One Link is transmitting data.

### GTS Installation

1. Connect the **red** wire from the OneLink I/O cable to the Normally Closed contact on the LOCP relay.
2. Connect the Common terminal on the relay to the negative terminal on the battery.
3. Connect the **pink** wire from the OneLink I/O cable to the Normally Open contact on the limit switch.